



- Measure heights of the wardrobe at three different points as left(Height 1), Middle(Height 2), and Right(Height 3) as shown in the above diagram and the dimensions should be taken in Milli Metres (mm).

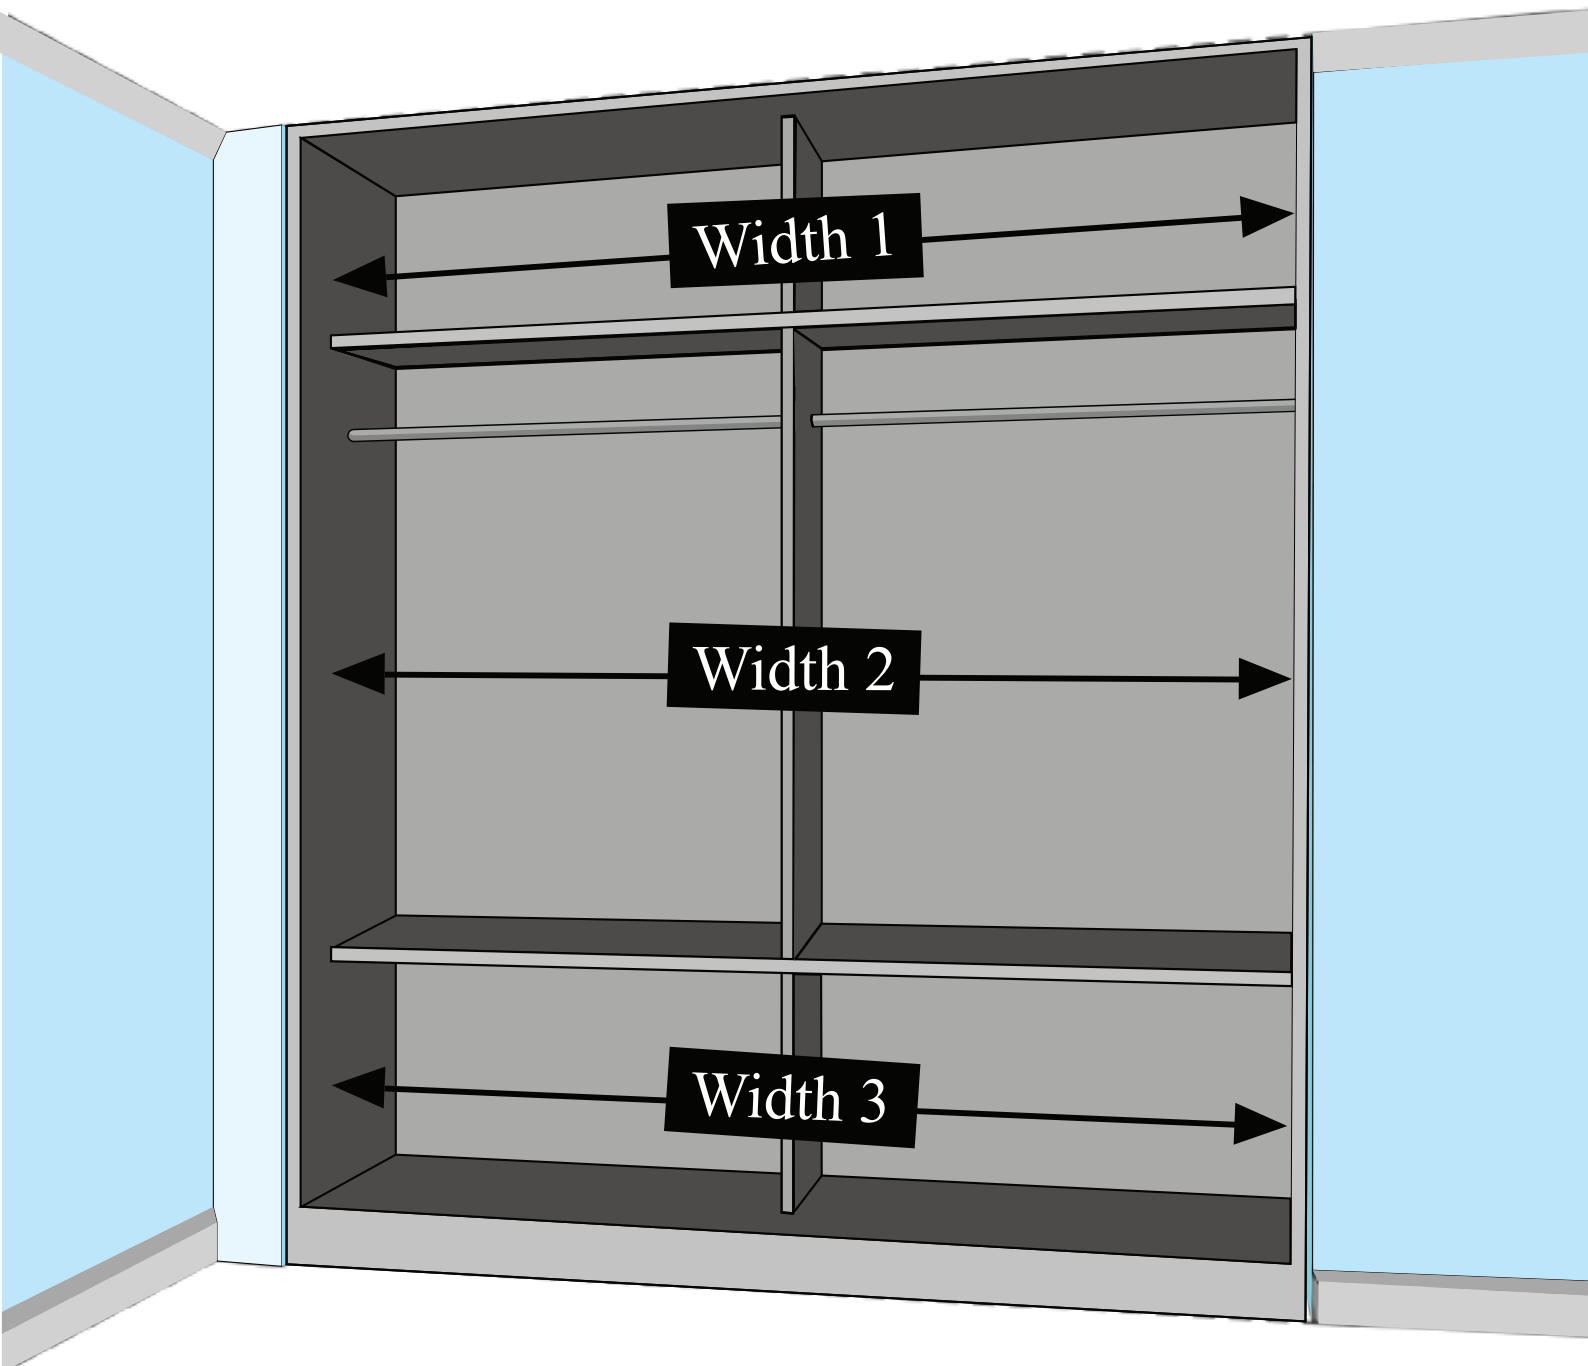

- Measure widths of the wardrobe at three different points as Top(Width 1), Middle(Width 2), and Bottom(width 3) as shown in the above diagram and the dimensions should be taken in Milli Metres (mm).

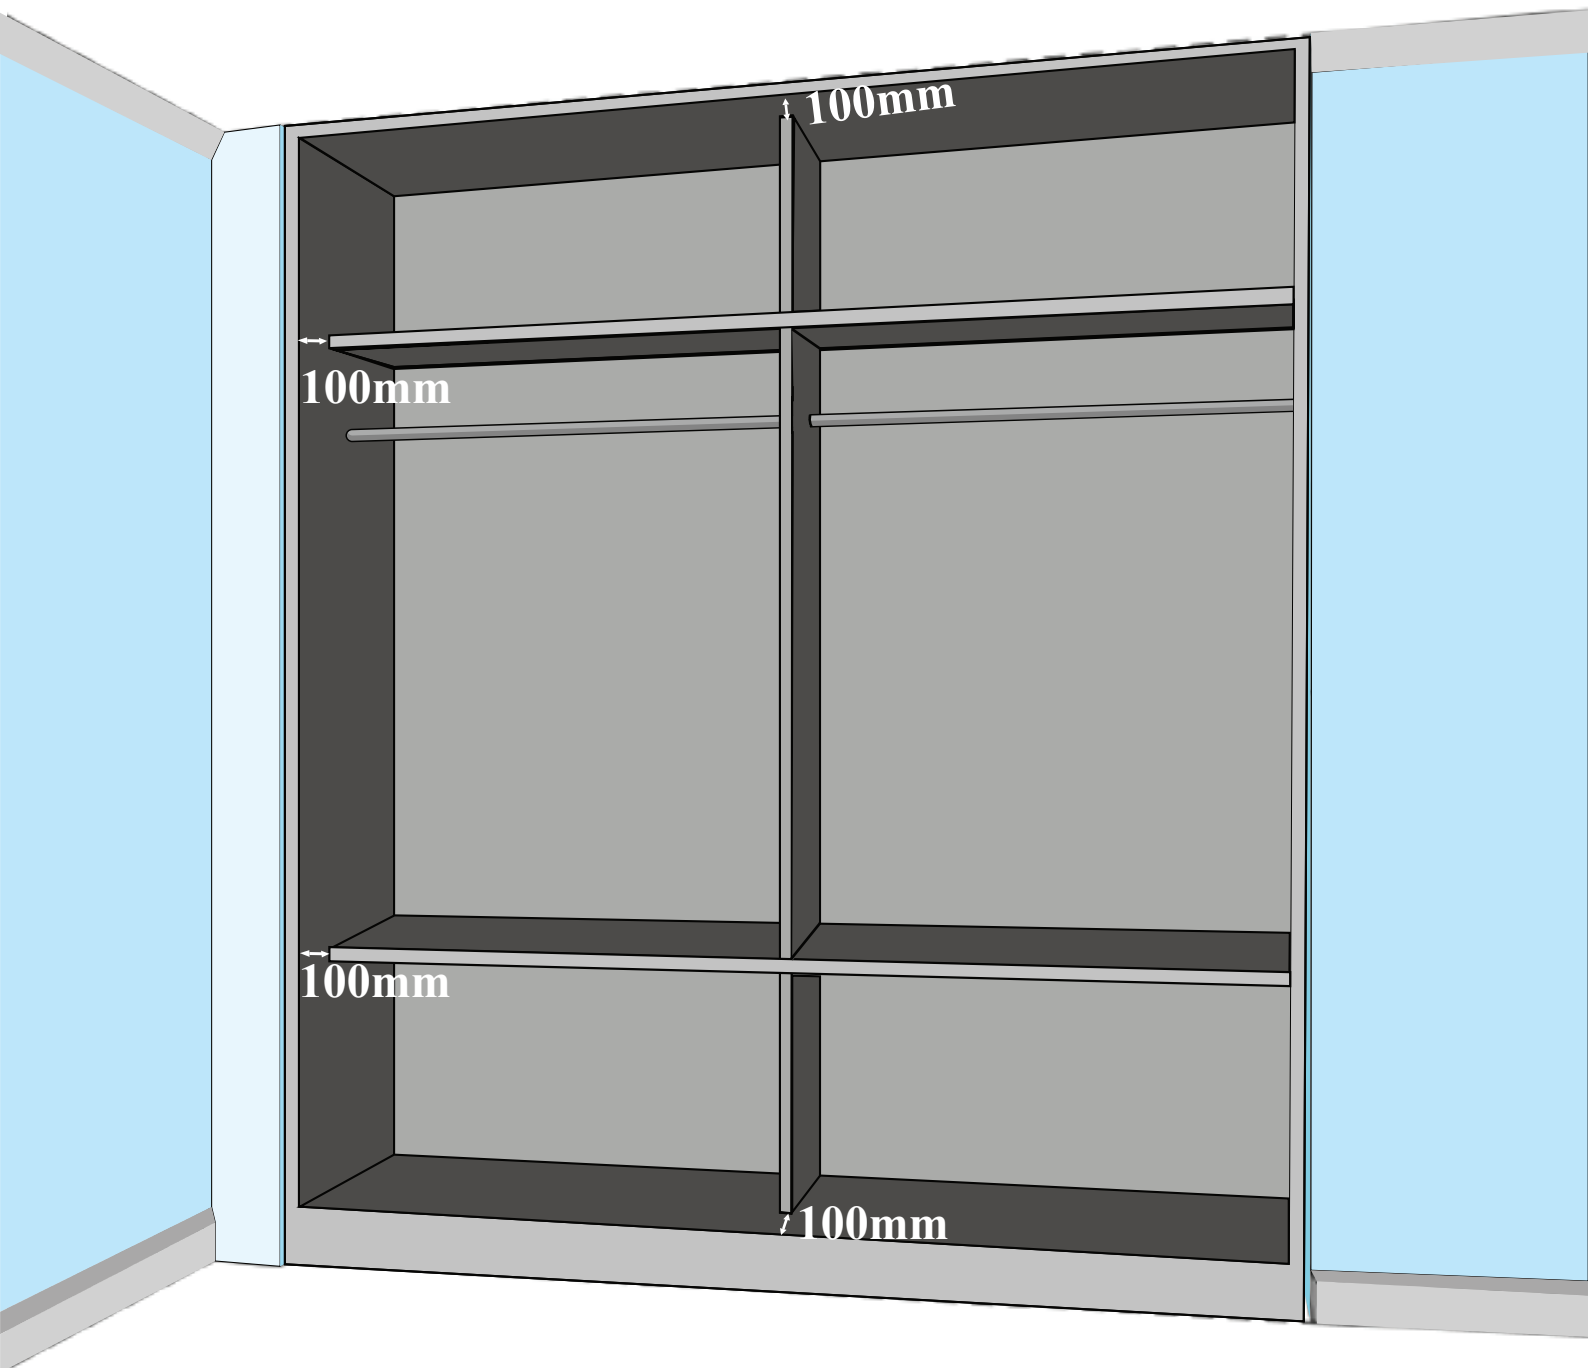

- To fit the sliding doors, 4 inches (100mm) clearance space should be left on all sides of the wardrobe as shown in the above diagram.